


TUBING ALIGNMENT GAGE (TAG) SADDLE ARRANGEMENT WITH ROLLER AND MEASURING ARM PLACEMENT

ADJUST ROLLERS AND MEASURING ARMS
TO MAINTAIN CENTERLINE LOCATIONS

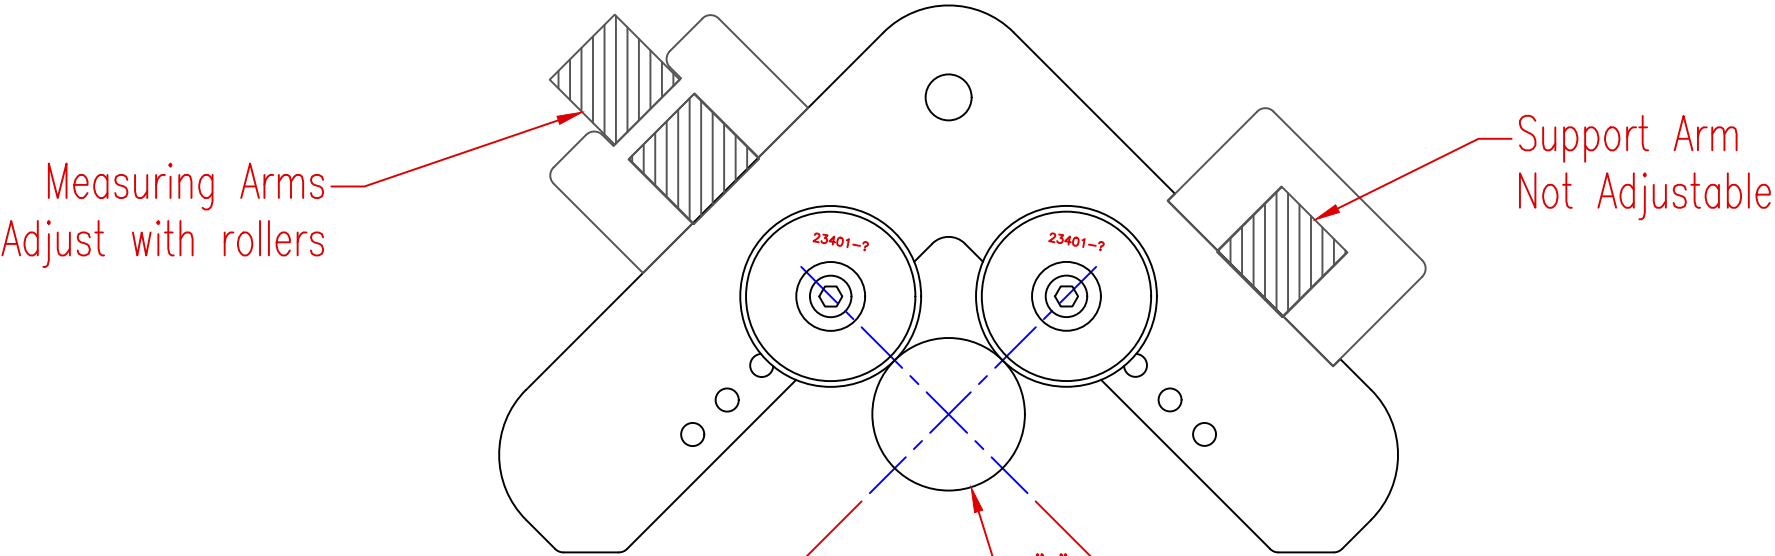

ATTACH PROPER ROLLER BASED ON
CHART. ALWAYS USE BOLT HOLE FOR
2 3/8" OD DRILL PIPE.

Approx. 90° and
Approx. Through
Center of Pipe

| "A" | Part Number |
|--------|-------------|
| 1.660" | 23401-1 |
| 1.900" | 23401-2 |
| 2.063" | 23401-3 |

WICKANDER