

GAGEMAKER

***IT-6001 Series
Internal Thread Taper Gage
OPERATION MANUAL***



©2014 Gagemaker, LP

Contents

Introduction

Technical Support	6
Product Information and Updates	6

Parts List	7
-------------------	----------

Setup Procedures

Setting Up the IT-6001 Gage	8
-----------------------------	---

Operating Procedures

Inspecting Parts	11
------------------	----

Care and Maintenance

Maintenance Tips	14
Warranty Information	14

Congratulations! Your decision to purchase a Gagemaker product above all others on the market demonstrates your confidence in our quality and workmanship.

To ensure the high performance and operation of our product, we urge you to use the included reference materials. They contain important information for proper setup and use of the equipment. Also, we recommend that you follow the care and maintenance tips in this manual to keep the equipment working in top condition.

If your questions have not been addressed in our reference materials, contact your local representative or a customer service representative at 713-472-7360.

Introduction

The IT-6001 gage inspects variations in connection taper of internal threads ranging from 5" - 20" and it will work with any depth of pipe. This model covers a specific range of connection sizes, making the IT-6001 gage very versatile and economical.

IT-6001 gages use precision contact points that seat in the thread of the part during inspection. The gage's indicator reports actual measurement readings. Each set of contact points is interchangeable to allow measuring different thread forms. Contact point diameters are manufactured to tolerances of $\pm .0002$ ". The pitch of the thread and type of thread form determine the diameter of the contact points required for taking measurements (refer to the table for API Threads in the Setup Procedures section of this manual).

The IT-6001 includes ten extension rods that attach to the gage and allow measuring a range of diameters up to 20". Using the different sizes of the extension rods will give the IT-6001 gage the proper internal dimension for the part being inspected.

The IT-6001 gage requires no setting master to inspect parts. The contact points are seated in the threads of the part and the gage is properly positioned by sweeping to obtain the largest indicator reading. Taking measurements in two different locations along the length of the thread will detect any variations in taper.

Technical Support

Phone: 713-472-7360


Hours: Monday – Friday 8AM – 5PM (CST)

Product Information and Updates

Visit our web site at: www.gagemaker.com

Parts List

Take some time to become familiar with all the parts that make up the IT-6000 gage by reviewing the labeled diagram below. The part names are important for understanding the operating instructions.

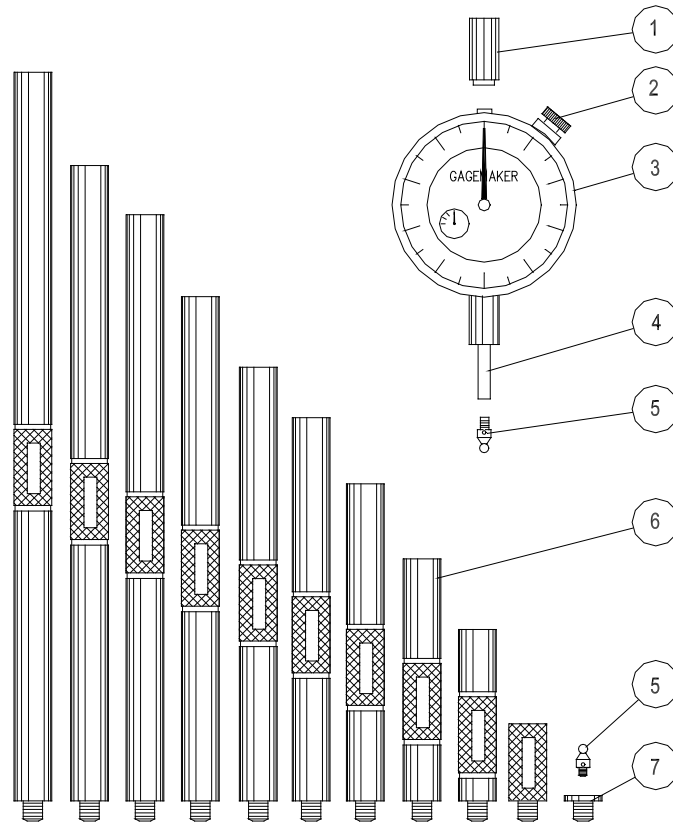

Item	Description	Part Number	Qty
1	Indicator cap	IT-6001-01	1
2	Indicator clamp	21RZA065	1
3	Indicator	862i	1
4	Indicator shaft	N/A	1
5	Contact points	T072	2
6	5" Extension rod	IT-6001-06	1
6	5 1/2" Extension rod	IT-6001-07	1
6	6 5/8" Extension rod	IT-6001-09	1
6	7" Extension rod	IT-6001-10	1
6	7 5/8" Extension rod	IT-6001-11	1
6	8 5/8" Extension rod	IT-6001-12	1
6	9 5/8" Extension rod	IT-6001-13	1
6	10 3/4" Extension rod	IT-6001-14	1
6	11 3/4" Extension rod	IT-6001-15	1
6	13 3/8" Extension rod	IT-6001-16	1
7	Contact point adapter	IT-6001-04	1

Set Up Procedures


Setting Up the IT-6001 Gage**Materials Needed:**

- IT-6001 taper gage
- Contact points (2)
- IT-6001 extension rods
- Calipers
- Paper clip

Setting up the IT-6001 gage, involves installing the proper size contact points for the application (refer to the table below for selecting the proper model contact point for API threads).

API Threads			
Connection Type	Pitch	Contact Point Diameter	Contact Point Model Number
Buttress Casing - Taper	5	0.090"	T090
API Tubing, Casing and Line Pipe	8	0.072"	T072
API Tubing and Line Pipe	10	0.057"	T057
API Line Pipe	11 ½	0.050"	T050

1. Determine the size of contact points to be used, by the pitch of the thread and type of connection being inspected.
2. Using calipers, verify the size of the contact point.

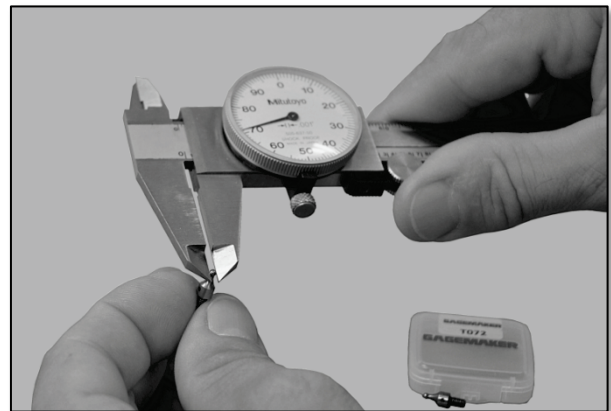


Setting Up the IT-6001 Gage (continued)

3. Install the lower contact point into the threaded hole in the indicator shaft until it is fully seated.



4. If necessary, install the proper size extension rod into the upper end of the gage.

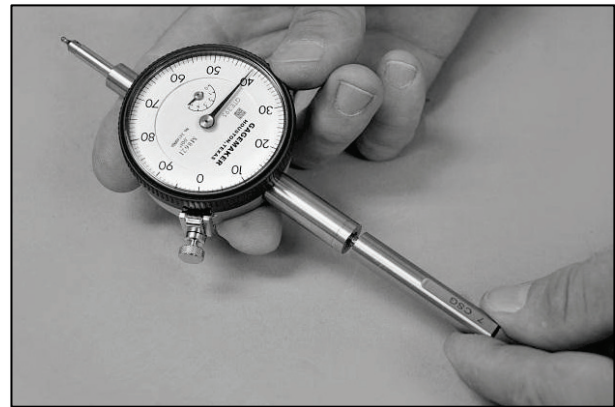


Do not use pliers to tighten the contact points, as damage may result

5. If necessary, install the contact point adapter into the extension rod.



Setting Up the IT-6001 Gage (continued)

6. Install the contact point into the adapter.

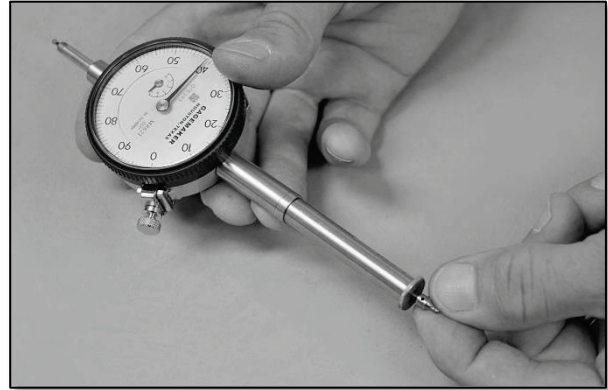

7. Once installed, insert a paper clip into the hole in each contact point and tighten.



Operating Procedures

Inspecting Parts

Materials Needed:

- IT-6001 taper gage
- Part
- Marking pen
- Ruler
- Inspection report

1. Using a marking pen, draw an axis line perpendicular to the threads on the part.



2. Draw one half revolution on the threads, starting at the first perfect thread. Draw another line 1" back from the first thread and a third line 1" back from the second line.

This step ensures that you place the contact points in the same helical path during inspection.




3. Loosen the indicator bezel.



Inspecting Parts (continued)

4. Seat the upper contact point into the third marked thread and seat the lower contact point into the same thread.

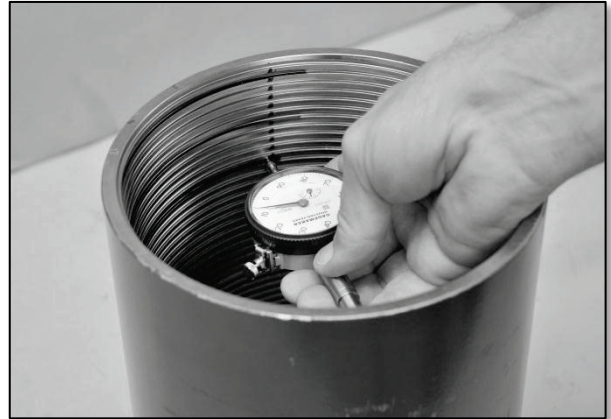

5. Using the lower contact point as the pivot point, sweep the gage from side to side to obtain the largest indicator reading.
6. Adjust the indicator bezel to align the needle with zero.



7. Move the gage to the second marked thread and sweep the upper contact point to obtain the largest indicator reading.
8. Adjust indicator bezel to align needle with zero.



Inspecting Parts (continued)

9. Move to the gage to the first marked thread, sweep to obtain largest indicator reading and determine if the part is within tolerance.
10. Record findings on the Inspection Report.
11. Verify repeatability of the gage periodically.



Care and Maintenance

Maintenance Tips

- Keep all unprotected metal surfaces coated with light oil.
- Avoid dropping the gage or subjecting it to any vibration or impact.
- Keep the gage dry and away from any machine coolant spray.
- Do not force the movement of any of the mechanical parts. The mechanics are designed to move freely.
- Keep the indicator face clean.

Warranty Information

Gagemaker warrants its products to be free from defects in material and workmanship under normal operating conditions for 12 months from the date of shipment. This warranty is limited to repairing, or at Gagemaker's option, replacing any product which is proven to have been defective at the time it was shipped and/or suffered damage during shipping; provided buyer has given Gagemaker written notice of any such claimed defect within 15 days of receipt. Any defective product must be properly packed and shipped to the Gagemaker factory in Pasadena, Texas USA. This warranty applies to all products when used in a normal industrial environment. Any unauthorized tampering, misuse or neglect will make this warranty null and void. Under no circumstances will Gagemaker or any affiliate have any liabilities for loss or for any indirect or consequential damages. The foregoing warranties are in lieu of all other warranties expressed or implied, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Products Requiring Repair or Calibration Return Process

1. Prior to sending any products to Gagemaker, please call 713-472-7360 and request a Returned Material Authorization (RMA) number from Sales.
2. Include a Purchase Order or work instructions with the returned product.
3. Return to: Gagemaker LP
712 East Southmore Ave.
Pasadena, TX 77502-110

GAGEMAKER

Gagemaker, LP, P.O. Box 87709, Houston, Texas 77287-7709
712 East Southmore Ave., Pasadena, Texas 77502
Phone: 713-472-7360
Fax: 713-472-7241
Web site: www.gagemaker.com